

PHARMACY  
AUTOMATION  
INNOVATION



Full Automatic Vial Filling MC  
**EV-180UC**

**yuyama**

Full Automatic Vial Filling MC

# EV-180UC

180 adjustable  
to respond to



## Recommended Customer Profile

- 500 Rx ~600 Rx /Day
- Pharmacies that frequently experience medication changes
- Pharmacies looking to positively impact cost-performance

## Specifications

- Number of Canisters: 180 Universal-Type Canisters
- Speed: 90 Rx/Hour (Condition: 30 Pills/Rx )
- Canister lock function
- Label printing with Patient, Prescription and Dispense data
- Simple, easy-to-follow printer label replenishment
- Simple and versatile vial bin technology

# "Universal Cassettes" makes it easy sudden changes in manufacturer or brand.

## Main Features




### 1 180 Automatically-Calibrating "Universal" Canisters.

Automatic calibration enables the user to adapt to sudden brand-to-generic or manufacturer changes. High-quality, automatic calibration implemented by the "EV180UC" and its universal canisters allows instant response on-site without having to order nor wait for additional canisters.



### 2 Adapts to various vial manufacturers' products

EV180UC is able to adapt to 12, 13, 16, 20, 40 DR vial sizes from various manufacturers  
\*Please consult our sales representatives for more information.

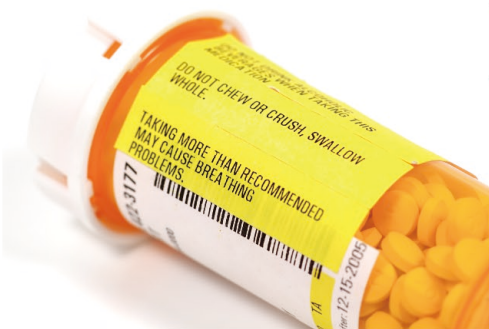

### 3 Adjustable Label Printing Format

Users can customize the printing format based on their patients' needs, making it possible for users to improve adherence.


## Other Features

- 1 Large, 15" Touchscreen for ease-of-use
- 2 Dispense history record-system

## Optional Accessories

- 1 Additional security management via fingerprint authentication
- 2 Additional quality control measures through image capture during medication replenishment

<b>Products Name</b>	EV-180UC/Full Automatic Vial Filling Machine
<b>Dispense Speed</b>	90 Rx/Hour
<b>Canisters</b>	180 Universal Canisters (650cc/Canister)
<b>Group Canisters</b>	5 caisters (MAX)
<b>Control Panel</b>	15 inch color LCD touch panel screen
<b>Label Size</b>	50.8 H x 101.6 W mm (2" x 4") Maximum roll diameter : 180mm
<b>Label Printing</b>	Available/Customizable *1mm inside from both edge
<b>Selection of Vials</b>	2 Sizes
<b>Vial Bin Capacity</b>	One box for one stocker (Approx)
<b>Applicable Vials</b>	CENTOR/IClic : 13,16,20,40DR CENTOR/Screw-Loc : 13,16,20,40DR BERRY/ Friendly&Safe : 12,16,20,40DR BERRY/PERFECTPak : 12,16,40DR TSD/Pro Tect Series : 13,16,20,40DR TSD/Pro One Series : 13,16,40DR
<b>Standard Accessories</b>	Barcode Scanner
<b>Power Consumption</b>	300 VA (MACHINE) 500 VA (PC)
<b>Weight</b>	630kg/Approx
<b>Power Requirements</b>	AC115±10% 60Hz
<b>Dimensions</b>	740 W x 2370 D x 1990 H mm
<b>Options</b>	Vein authentication , Camera for replenish check

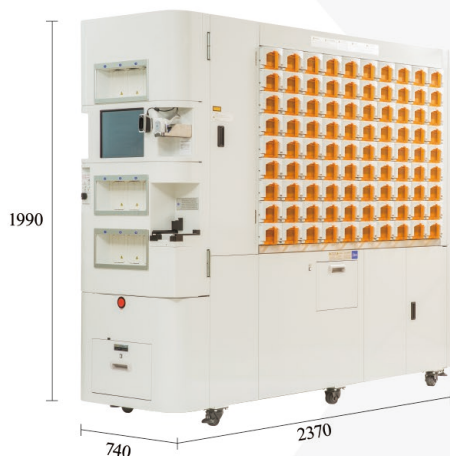

## Yuyama Fabrication

In pursuit of customer satisfaction of our products, we respond to the detailed demands of users all over the world and have achieved significant success in the pharmacy industry.

Yuyama is particular about in-house development based on the policy "Customer First", and we are committed to establishing a consistent development-to-production. Yuyama strives to provide solutions to customer's problems through the usability and high quality of our products.

### YUYAMA CO.,LTD YUYAMA MFG.,LTD

3-3-1 Meishinguchi Toyonaka,Osaka 561-0841 Japan  
TEL : +81-6-7635-6312 Fax : +81-6-7635-6313  
E-mail(International Sales) : ys\_trade@yuyama.co.jp  
<http://www.yuyama.co.jp>

### YUYAMA USA Inc.

2050 lively Blvd. Elk Grove Village, IL 60007  
TEL : 847-593-1005 Fax : 847-593-1210  
[www.yuyamarx.com](http://www.yuyamarx.com)

The catalog contents are as of April 2018.  
Please note that specifications and design may be changed without prior notice for product improvement.



Yuyama MFG Co., Ltd has obtained ISO9001(Year of 2000)on March 2003. It is not only for managing quality control process but also pursuing the 100% customer satisfaction. In addition, Okayama factory has obtained ISO14001, which is for environment management system, on September 2003.