

*New*

Your Partner in Medication  
**yuyama**

Automatic Drug Picking System with a new standard for  
automatic dispensing with zero human error

# DrugStation



Depending on the  
combination of S / M / L trays

**1200**

drug kinds can be stored\*

※Wide 3,580, one picking stand configuration.  
Number of drug kinds varies depending on the  
combination of trays.

Simply pick drugs at high speed from the trays that appear in front of you.

## Safety

Picking with no mistake



The central part of the drug tray  
opens and closes according to  
the drug size. Only the right  
drugs can be picked.

## Efficiency

Picking by robotic arm



Drug tray are automatically  
delivered to you, allowing  
you to work efficiently at the  
picking table.

## Almighty

Support all forms of drug



Not only the boxes, but also  
support blister sheets, ointments,  
eye drops and pouches



## Picking without moving

Just pick drug from the tray that appears in front of you. Follow the screen without walking around in front of the shelves. Drugs can be picked efficiently, and non-pharmacists can use it with confidence.



## Reliable check function

Check the picking drugs by weight, and use the camera to check the fractional quantity of PTP sheets. Since it has a check function, you can use it with confidence.




## Refill according to the amount

Call the tray by scanning GS1 barcode. Open the shutter through the system is safe and reliable. Various fillings such as boxes, ointment and PTP sheets are possible depending on the amount used.



## Abundant tray variation

There are 7 types of tray variations (S, M, L, S/2, M/2, L/2 and L/5). The M/L tray can also accommodate fractional pockets. You can choose the appropriate tray according to the size and amount of drug used.

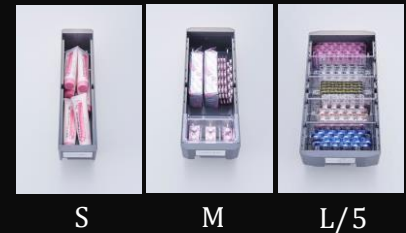

## Safe even in an emergency

It is safe even in emergency situations such as sudden power outage. You can easily open the door and pick by hand while viewing the journal paper printed with drug name and tray number.



Product Information	
Name	Drug Station
Model	YS-DS-3600-L(R)
Size	Main unit: W3,580mm × D1,800mm × H2,285mm Picking counter: W1,200mm × D600 mm × H1,200mm

